

### Interphone system for Elevator

Provide the communication for technicians when they checking or installing the elevator. For emergency, the passenger inside the car cabin could talk to the security person.



**MT-601-1**

- Collocation: CP-601-x
- Standard voltage: DC 6V
- Voltage range: DC 4.5V ~ 15V



**MT-610-1**

- Collocation: CP-610-2
- Standard voltage: DC 6V
- Voltage range: DC 4.5V ~ 15V



**MT-601-2**

- Collocation: CP-601-x
- Standard voltage: DC 6V
- Voltage range: DC 4.5V ~ 15V



**MT-606-2**

- Collocation: CP-610-2
- Standard voltage: DC 6V
- Voltage range: DC 4.5V ~ 15V



**MT-612-2**

- Collocation: CP-610-2
- Standard voltage: DC 6V
- Voltage range: DC 4.5V ~ 15V



**MT-1201-1**

- Collocation: CP-1201-2
- Standard voltage: DC 12V
- Voltage range: DC 8V ~ 18V



**MT-1210-1**

- Collocation: CP-1210-2
- Standard voltage: DC 12V
- Voltage range: DC 8.4V ~ 18V



**MT-2406-2**

- Collocation: CP-2406-x
- Standard voltage: DC 24V
- Voltage range: DC 14V ~ 30V



**CP-601-1**

- Collocation: MT-601-x
- Standard voltage: DC 6V



**CP-601-2**

- Collocation: MT-601-x, TEL-606M-1
- Standard voltage: DC 6V

**CP-610-2**

- Collocation: MT-610-1, MT-606-2, MT-612-2, TEL-606M-1
- Standard voltage: DC 6V

**CP-1201-2**

- Collocation: MT-1201-1
- Standard voltage: DC 12V

**CP-1210-2**

- Collocation: MT-1210-1
- Standard voltage: DC 12V



**CP-2406-2**

- Collocation: MT-2406-2
- Standard voltage: DC 24V